

SHARP



TINS-H726WJN1

4T-C65FL1X
4T-C55FL1X
4T-C50FL1X

4T-C75FK1X
4T-C65FK1X
4T-C55FK1X
4T-C50FK1X
4T-C42FK1X



<https://global.sharp/restricted/support/aquos/emanual/asia/pdf/fk/android11/index.html>

- (EN) - Please scan the code above to access PDF E-Manual. The networks of the internet charges will be applied.
- (CS) - 请扫描上面的代码以访问 PDF 电子手册。将应用互联网收费的网络。
- (FR) - Veuillez scanner le code ci-dessus pour accéder au manuel électronique PDF. Les réseaux des charges internet seront appliqués.
- (PT) - Por favor, escaneie o código acima para acessar o PDF E-Manual. As redes das taxas de internet serão aplicadas.
- (ID) - Harap pindai kode di atas untuk mengakses PDF E-Manual. Biaya jaringan internet akan diterapkan.
- (AR) - يرجى مسح الرمز أعلاه للوصول إلى الدليل الإلكتروني بتنسيق PDF. سيتم تطبيق رسوم شبكات الإنترنت.

AQUOS

LED BACKLIGHT TV

- (EN) - Initial setup guide
- (CS) - 初始设置指南
- (FR) - Guide d'installation initiale
- (PT) - Guia de configuração inicial
- (ID) - Panduan penyiapan awal
- (AR) - دليل الإعداد الأولي

- (EN) - Please read "Important safety precautions" before setting up the TV.
- (CS) - 在设置电视前，请阅读“关于安全的重要注意事项”。
- (FR) - Veuillez lire les « Précautions de sécurité importantes » avant d'installer le téléviseur.
- (PT) - Antes de começar a configurar o televisor, leia as "Importantes Precauções de Segurança".
- (ID) - Harap baca "Tindakan pencegahan penting untuk keselamatan" sebelum menyiapkan TV.
- (AR) - يرجى قراءة "تنبيهات احتياوية هامة حول السلامة" قبل إعداد التلفزيون.

HDMI™

Dolby
VISION IQ

Dolby
ATMOS

Bluetooth®



WiFi
CERTIFIED




HE Advance™

TINS-H726WJN1
23P07-MA-NS

(EN) - 1

A. Supplied accessories
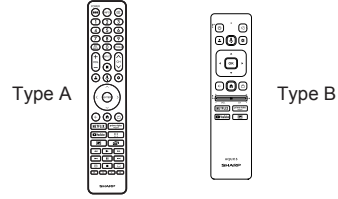
<p>① Remote control unit 65FL / 55FL / 50FL (Type A × 1, Type B × 1) 75FK / 65FK / 55FK / 50FK / 42FK (Type A × 1)</p>  <p>Type A Type B</p>	<p>② "AAA" size battery 65FL / 55FL / 50FL (× 4) 75FK / 65FK / 55FK / 50FK / 42FK (× 2)</p> <p>③ Screws 75FK / 65FL / 65FK (M5 x 15mm) × 4 55FL / 55FK / 50FL / 50FK / 42FK (M4 x 12mm) × 4</p> <p>④ Initial setup guide</p>	<p>⑤ Antenna adaptor (The Philippines only)</p> 
--	--	---

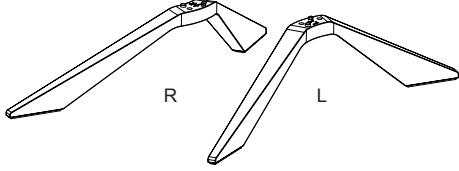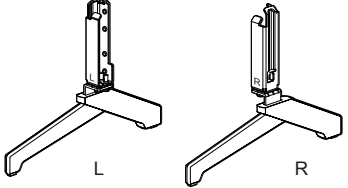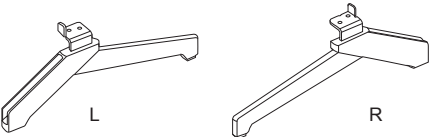
<p>⑥ Stand base</p> <p>75FK</p>  <p>R L</p>	<p>65FL / 65FK</p>  <p>L R</p>
<p>55FL / 55FK / 50FL / 50FK / 42FK</p>  <p>L R</p>	

	A	①	②
CS	随机附件	遥控器 A型, B型	"AAA" 型号电池
FR	Accessoires fournis	Télécommande Type A, Type B	Pile de format « AAA »
PT	Acessórios fornecidos	Controlo remoto Tipo A, Tipo B	Pilha de tamanho "AAA"
ID	Aksesori yang disertakan	Unit remote kontrol Tipe A, Tipe B	Baterai ukuran "AAA"
AR	الكماليات المرفقة	وحدة التحكم عن بعد نوع A, نوع B	بطارية من حجم "AAA"

	③	④	⑤	⑥
CS	螺丝钉	初始设置指南	天线适配器 (仅限菲律宾)	底座
FR	Vis	Guide d'installation initiale	Adaptateur d'antenne (Les Philippines uniquement)	Socle
PT	Parafusos	Guia de configuração inicial	Adaptor de antena (Filipinas apenas)	Base do suporte
ID	Sekrup	Panduan penyiapan awal	Antena Adaptor (Filipina saja)	Dasar Dudukan
AR	البراغي	دليل الإعداد الأولي	محول الهوائي (للفلبين فقط)	قاعدة الحامل


(EN) - 2

 B. Inserting the batteries

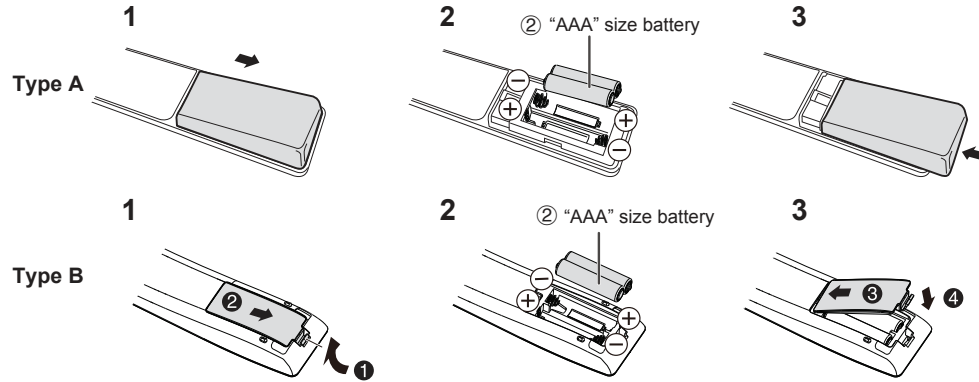

	B	CAUTION
EN	Inserting the batteries	<p>CAUTION • Replacement of a battery with an incorrect type that can defeat a safeguard (for example, in the case of some lithium battery types).</p> <ul style="list-style-type: none"> Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, can result in an explosion. Leaving a battery in an extremely high temperature surrounding environment can result in an explosion or the leakage of flammable liquid or gas. A battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas. Risk of fire or explosion if the battery is replaced by an incorrect type.
CS	装入电池	<p>警告 • 更换类型不正确的电池可能会破坏保护措施（例如某些锂电池类型）。</p> <ul style="list-style-type: none"> 将电池弃入火中或热烤箱中，或者机械挤压或切割电池，都可能导致爆炸。 将电池留在极端高温的周围环境中可能会导致爆炸或泄漏易燃液体或气体。 承受极低气压的电池可能会导致爆炸或泄漏易燃液体或气体。 如果更换的电池型号不正确，则有火灾或爆炸的危险。
FR	Insertion des piles	<p>ATTENTION • Remplacement d'une batterie par un type incorrect qui peut annuler une protection (par exemple, dans le cas de certains types de batteries au lithium).</p> <ul style="list-style-type: none"> L'élimination d'une batterie dans le feu ou dans un four chaud, ou l'écrasement ou le découpage mécanique d'une batterie, peut entraîner une explosion. Laisser une batterie dans un environnement à température extrêmement élevée peut entraîner une explosion ou une fuite de liquide ou de gaz inflammable. Une batterie soumise à une pression d'air extrêmement basse peut entraîner une explosion ou une fuite de liquide ou de gaz inflammable. Risque d'incendie ou d'explosion si la batterie est remplacée par un type incorrect.
PT	Colocar as pilhas	<p>CUIDADO • Substituição de uma bateria por um tipo incorreto que pode anular uma proteção (por exemplo, no caso de alguns tipos de bateria de lítio).</p> <ul style="list-style-type: none"> O descarte de uma bateria no fogo ou em um forno quente, ou o esmagamento ou corte mecânico de uma bateria, pode resultar em explosão. Deixar a bateria em um ambiente com temperatura extremamente alta pode resultar em explosão ou vazamento de líquido ou gás inflamável. Uma bateria submetida a pressão de ar extremamente baixa pode resultar em explosão ou vazamento de líquido ou gás inflamável. Risco de incêndio ou explosão se a bateria for substituída por um tipo incorreto.
ID	Memasukkan Baterai	<p>PERHATIAN • Penggantian baterai dengan jenis yang salah yang dapat merusak perlindungan (misalnya, untuk beberapa jenis baterai litium).</p> <ul style="list-style-type: none"> Pembuangan baterai ke dalam api atau oven panas, atau penghancuran atau pemotongan baterai secara mekanis, dapat mengakibatkan ledakan. Membiarkan baterai di lingkungan sekitar yang bersuhu sangat tinggi dapat mengakibatkan ledakan atau kebocoran cairan atau gas yang mudah terbakar. Baterai yang terekspos tekanan udara yang sangat rendah dapat mengakibatkan ledakan atau kebocoran cairan atau gas yang mudah terbakar. Risiko kebakaran atau ledakan jika baterai diganti dengan tipe yang salah.
AR	ادخال البطاريات	<p>تنبيه • استبدال البطارية بنوع غير صحيح يمكن أن يبطل الحماية (على سبيل المثال في حالة بعض أنواع بطاريات الليثيوم).</p> <ul style="list-style-type: none"> يمكن أن يؤدي التخلص من البطارية في النار أو في فرن ساخن أو لتكسير الميكانيكي للبطارية أو قطعها إلى حدوث انفجار. قد يؤدي ترك البطارية في درجة حرارة عالية للغاية في البيئة المحيطة إلى حدوث انفجار أو تسرب سائل أو غاز قابل للاشتعال. قد ينتج عن تعرض البطارية لضغط هواء منخفض للغاية حدوث انفجار أو تسرب سائل أو غاز قابل للاشتعال. خطر نشوب حريق أو انفجار إذا تم استبدال البطارية بنوع غير صحيح.

 C. Attaching the stand

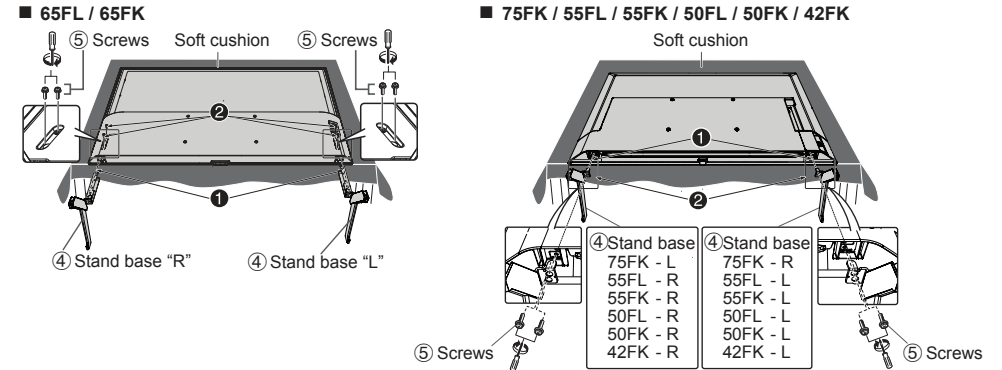

	C	CAUTION	Assembly Steps	Soft Cushion
EN	Attaching the stand	<p>CAUTION • Assemble on a soft cushion on a stable, flat and wide table.</p> <ul style="list-style-type: none"> Work with two or more people. Do not grab the corners of the TV when lifting. Do not remove protective pad until TV is assembled. Otherwise, the screen can be damaged from direct pressure. 	<ol style="list-style-type: none"> Insert the stand base into the openings on the bottom of the TV. Insert and tighten the screws into the aligned holes in the TV and stand base holes on the bottom/rear of the TV. 	Soft cushion
CS	安装支架	<p>警告 • 组装时请在一张稳定、平坦、宽大且有软垫的桌子上进行。</p> <ul style="list-style-type: none"> 与两个或更多人一起工作。 抬起时请勿抓住电视机的角。 在组装电视机之前请勿取下保护垫。否则，屏幕可能会因直接压力而损坏。 	<ol style="list-style-type: none"> 将支架底座插入电视底部的开口中。 将螺钉插入并拧紧电视底部/背面对齐的电视孔和支架底座孔。 	软衬垫
FR	Fixation du socle	<p>ATTENTION • Assemblez sur un coussin moelleux sur une table stable, plate et large.</p> <ul style="list-style-type: none"> Travaillez avec deux personnes ou plus. Ne saisissez pas les coins du téléviseur lorsque vous le soulevez. Ne retirez pas le coussin de protection tant que le téléviseur n'est pas assemblé. Sinon, l'écran peut être endommagé par la pression directe. 	<ol style="list-style-type: none"> Insérez la base du support dans les ouvertures au bas du téléviseur. Insérez et serrez les vis dans les trous alignés du téléviseur et les trous de la base du support au bas/à l'arrière du téléviseur. 	Coussin moelleux
PT	Instalar o suporte	<p>CUIDADO • Monte em uma almofada macia em uma mesa estável, plana e larga.</p> <ul style="list-style-type: none"> Trabalhe com duas ou mais pessoas. Não segura os cantos da TV ao levantá-la. Não remova a almofada protetora até que a TV seja montada. Caso contrário, a tela pode ser danificada pela pressão direta. 	<ol style="list-style-type: none"> Insira a base do suporte nas aberturas na parte inferior da TV. Insira e aperte os parafusos nos orifícios alinhados na TV e suporte os orifícios da base na parte inferior/traseira da TV. 	Almofada macia
ID	Memasang Dudukan	<p>PERHATIAN • Susun di atas bantal empuk di atas meja yang stabil, datar, dan lebar.</p> <ul style="list-style-type: none"> Bekerja dengan dua orang atau lebih. Jangan pegang sudut TV saat mengangkat. Jangan lepaskan bantal pelindung sampai TV dipasang. Jika tidak, layar dapat rusak karena tekanan langsung. 	<ol style="list-style-type: none"> Masukkan dasar dudukan ke dalam lubang di bagian bawah TV. Masukkan dan kencangkan sekrup ke dalam lubang yang sejajar di TV dan lubang alas dudukan di bagian bawah/ belakang TV. 	Bantalan lunak
AR	تركيب الحامل	<p>تنبيه • قم بالجميع على وسادة ناعمة على طاولة ثابتة ومستوية وعريضة.</p> <ul style="list-style-type: none"> العمل مع شخصين أو أكثر. لا تمسك بزوايا التلفزيون عند الرفع. لا تقيم بإزالة الوسادة الواقية حتى يتم جميع التلفزيون. خلاف ذلك، يمكن أن تتلف الشاشة من الضغط المباشر. 	<ol style="list-style-type: none"> أدخل قاعدة الحامل في الفتحات الموجودة أسفل التلفزيون. أدخل المسامير وأحكام ربطها في الفتحات المحاذية في التلفزيون وفتحات قاعدة الحامل في الجزء السفلي/ الخلفي من التلفزيون. 	حشية لينة

Dear SHARP customer

Thank you for your purchase of the SHARP LCD colour TV product. To ensure safety and many years of trouble-free operation of your product, please read the Important Safety Precautions carefully before using this product.

Important Safety Precautions

[ENGLISH EN]

- Stand base must be attached to prevent the TV set from falling down and cause injuries.
- Cleaning — Unplug the AC cord from the AC outlet before cleaning the product. Use a soft damp cloth to clean the product. Do not use liquid cleaners, aerosol cleaners or chemical cloth to clean it, as such materials may damage the product.
- Water and moisture — Do not use the product near water, such as bathtub, washbasin, kitchen sink, laundry tub, swimming pool and in a wet basement.
- Do not place vases or any other water-filled containers on this product. The water may spill onto the product causing fire or electric shock.
- Stand — Do not place the product on an unstable cart, stand, tripod or table. Doing so can cause the product to fall, resulting in serious personal injuries as well as damage to the product. Use only a cart, stand, tripod, bracket or table recommended by the manufacturer or sold with the product. When mounting the product on a wall, be sure to follow the manufacturer's instructions. Use only the mounting hardware recommended by the manufacturer.
- When relocating the product placed on a cart, it must be moved with utmost care. Sudden stops, excessive force and uneven floor surface can cause the product to fall from the cart.
- Ventilation — The vents and other openings in the cabinet are designed for ventilation. Do not cover or block these vents and openings since insufficient ventilation can cause overheating and/or shorten the life of the product. Do not place the product on a bed, sofa, rug or other similar surface, since they can block ventilation openings. This product is not designed for built-in installation; do not place the product in an enclosed place such as a bookcase or rack, unless proper ventilation is provided or the manufacturer's instructions are followed.
- The LCD panel used in this product is made of glass. Therefore, it can break when the product is struck forcefully or with a sharp object. If the LCD panel is broken, be careful not to be injured by broken glass.
- Heat sources — Keep the product away from heat sources such as radiators, heaters, stoves and other heat-generating products (including amplifiers).
- To prevent fire, never place any type of candle or naked flames on the top or near the TV set.
- To prevent fire or shock hazard, do not place the AC power cord under the TV set or other heavy items.
- Do not place heavy objects on this product or stand on it. Doing so could cause injury if the product overturns. Take special care near children and pets.
- The LCD panel is made with extremely high precision technology, and has 99.99% or more effective pixels. The 0.01% or less missing pixels or those that are always lit is not a malfunction.

Precautions when transporting the TV

When transporting the TV, never carry it by holding or otherwise putting pressure onto the display. Be sure to always carry the TV by two people holding it with two hands — one hand on each side of the TV.

- Do not display a still picture for a long time, as this could cause an afterimage to remain.
- Install the product on the place where the AC cord can be unplugged easily from the AC outlet or from the AC INPUT terminal on the rear of the product.
- Stability Hazard
A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:
 - ALWAYS use cabinets or stands or mounting methods recommended by the manufacturer of the television set.
 - ALWAYS use furniture that can safely support the television set.
 - ALWAYS ensure the television set is not overhanging the edge of the supporting furniture.
 - ALWAYS educate children about the dangers of climbing on furniture to reach the television set or its controls.
 - ALWAYS route cords and cables connected to your television so they cannot be tripped over, pulled or grabbed.
 - NEVER place a television set in an unstable location.
 - NEVER place the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
 - NEVER place the television set on cloth or other materials that may be located between the television set and supporting furniture.
 - NEVER place items that might tempt children to climb, such as toys and remote controls, on the top of the television or furniture on which the television is placed.

 
If the existing television set is going to be retained and relocated, the same considerations as above should be applied.

- Do not install the TV in a location in which it will be subject to water drops such as underneath an air conditioning unit or in the vicinity of a humidifier.
 - Water drops falling onto the TV and water entering inside it may result in fire, electric shock, or malfunctions.
 - We recommend that you install the TV at least 1m away from the outlet of an air conditioner.

Initial installation

Follow the steps below one by one when using the TV for the first time. Some steps may not be necessary depending on your TV installation and connection.

- 1 Connect an antenna cable to the antenna terminal.

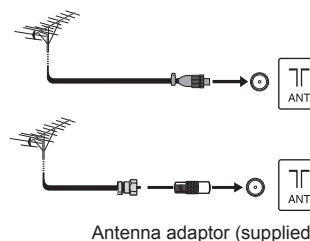

- 2 Plug the AC cord into the AC outlet.

 
- Place the TV close to the AC outlet, and keep the power plug within reach.
- Product shape varies in some countries.

- 3 Press / (JOG-KEY) / POWER on the TV.

- 4 Run the initial installation.
 - Follow the guide on the TV screen to set the settings.


Terminal Diagram (TV Rear)

4T-C75FK1X

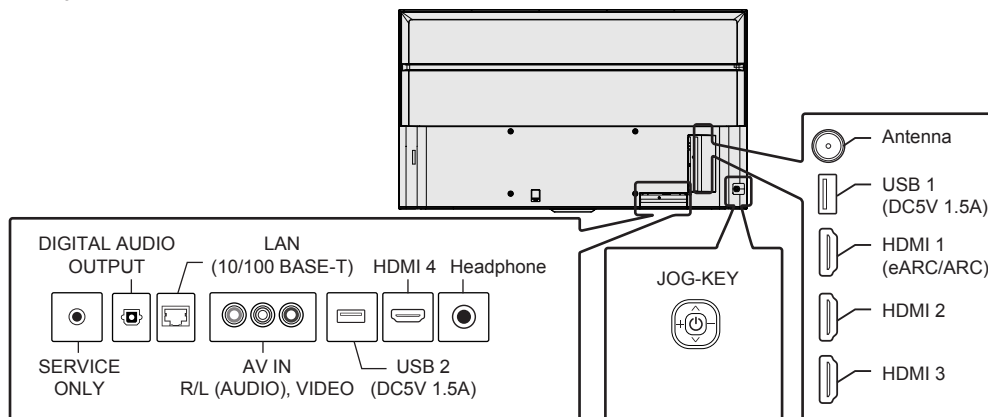

4T-C65/55/50FL1X

 4T-C65/55/50/42FK1X

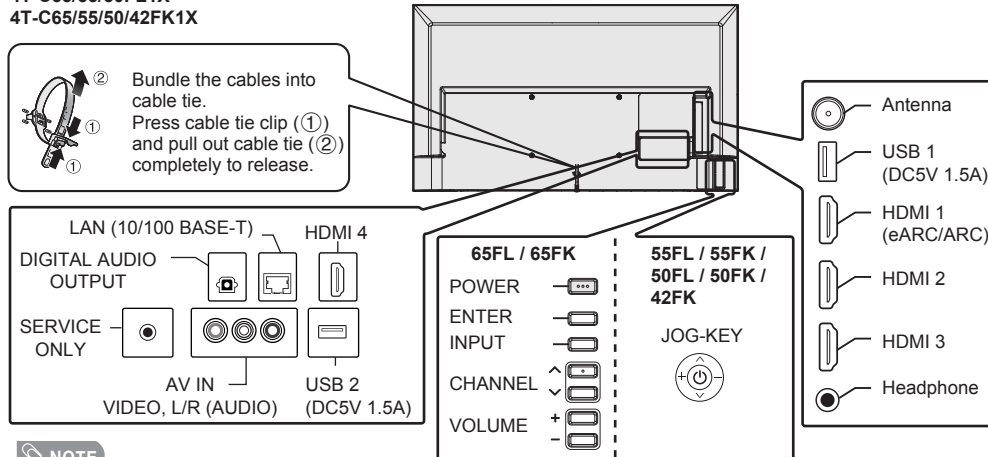

NOTE

- This drawings used throughout this manual are based on the 4T-C50FL1X / 4T-C50FK1X.

Viewing E-Manual

Viewing the Built-in Operation Manual

Displays the built-in operation manual on the screen. You can read information about how to use this device.

The internet connection will be required.

- 1 Press **HOME** to display the HOME screen, press **</>** to select "Manual", and then press **ENTER/OK**.

This displays the built-in operation manual screen.

- 2 When you select contents, its page will be displayed.



Appendix

Troubleshooting

The problems described below are not always caused by malfunctions. Check the TV again before having the TV serviced.

Problem	Possible Solution
• No power.	<ul style="list-style-type: none"> • Check if you pressed POWER on the remote control unit. • Is the AC cord disconnected? • Has the power been turned on?
• Remote control unit does not operate.	<ul style="list-style-type: none"> • Are batteries inserted with polarity (+, -) aligned?
• No picture.	<ul style="list-style-type: none"> • Is connection to other components correct?
• No sound.	<ul style="list-style-type: none"> • Is connection to other components correct?

DISCLAIMERS

- This SHARP device facilitates the access to content and services provided by third parties. The content and services accessible via this device belong to and may be proprietary to third parties. Therefore, any use of such third party content and services must be in accordance with any authorization or terms of use provided by such content or service provider. SHARP shall not be liable to you or any third party for your failure to abide by such authorization or terms of use. Unless otherwise specifically authorized by the applicable content or service provider, all third party content and services provided are for personal and non-commercial use; you may not modify, copy, distribute, transmit, display, perform, reproduce, upload, publish, license, create derivative works from, transfer or sell in any manner or medium any content or services available via this device.
- SHARP is not responsible, nor liable, for customer service-related issues related to the third party content or services. Any questions, comments or service-related inquiries relating to the third party content or service should be made directly to the applicable content or service provider. You may not be able to access content or services from the device for a variety of reasons which may be unrelated to the device itself, including, but not limited to, power failure, other Internet connection, or failure to configure your device properly. SHARP, its directors, officers, employees, agents, contractors and affiliates shall not be liable to you or any third party with respect to such failures or maintenance outages, regardless of cause or whether or not it could have been avoided.
- ALL THIRD PARTY CONTENT OR SERVICES ACCESSIBLE VIA THIS DEVICE IS PROVIDED TO YOU ON AN "AS-IS" AND "AS AVAILABLE" BASIS AND SHARP AND ITS AFFILIATES MAKE NO WARRANTY OR REPRESENTATION OF ANY KIND TO YOU, EITHER EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, ANY WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT, FITNESS FOR A PARTICULAR PURPOSE OR ANY WARRANTIES OF SUITABILITY, AVAILABILITY, ACCURACY, COMPLETENESS, SECURITY, TITLE, USEFULNESS, LACK OF NEGLIGENCE OR ERROR-FREE OR UNINTERRUPTED OPERATION OR USE OF THE CONTENT OR SERVICES PROVIDED TO YOU OR THAT THE CONTENT OR SERVICES WILL MEET YOUR REQUIREMENTS OR EXPECTATIONS.
- SHARP IS NOT AN AGENT OF AND ASSUMES NO RESPONSIBILITY FOR THE ACTS OR OMISSIONS OF THIRD PARTY CONTENT OR SERVICE PROVIDERS, NOR ANY ASPECT OF THE CONTENT OR SERVICE RELATED TO SUCH THIRD PARTY PROVIDERS.
- IN NO EVENT WILL SHARP AND/OR ITS AFFILIATES BE LIABLE TO YOU OR ANY THIRD PARTY FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, PUNITIVE, CONSEQUENTIAL OR OTHER DAMAGES, WHETHER THE THEORY OF LIABILITY IS BASED ON CONTRACT, TORT, NEGLIGENCE, BREACH OF WARRANTY, STRICT LIABILITY OR OTHERWISE AND WHETHER OR NOT SHARP AND/OR ITS AFFILIATES HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Specifications

Item	Model	75FK	65FL 65FK	55FL 55FK	50FL 50FK	42FK	
LCD panel		189 cm	164 cm	139 cm	126 cm	105 cm	
Resolution		8,294,400 pixels (3840 × 2160)					
Video colour system		PAL/SECAM/NTSC 3.58/NTSC 4.43/PAL 60					
TV function	TV-standard	Analogue	PAL: B/G, D/K, I SECAM: B/G, D/K, K/K1 NTSC: M				
		Digital	DVB-T/DVB-T2, DTMB (For Hong Kong)				
	Receiving channel	VHF/UHF	44.25 – 863.25 MHz				
		TV-tuning system	Auto Preset				
	STEREO/BILINGUAL	NICAM: B/G, I, D/K A2 stereo: B/G MTS: M					
Audio amplifier		10 W × 2					
Terminals	Antenna	75 Ω DIN type					
	HDMI 1	HDMI 4K, ALLM/VRR, eARC/ARC					
	HDMI 2, 3, 4	HDMI 4K, ALLM/VRR					
	AV IN	AUDIO in, VIDEO in					
	USB 1, 2	USB (DC5V 1.5A output)					
	LAN (10/100 BASE-T)	Network connector					
	DIGITAL AUDIO OUTPUT	Optical S/PDIF digital audio output					
	Headphone	φ 3.5 mm stereo					
	SERVICE ONLY	φ 3.5 mm jack					
Wi-Fi Protocole (Wi-Fi Security)		IEEE 802.11 a/b/g/n/ac 2T/2R Dual Band (WFA/WPA/WPA2)					
Bluetooth		V2.1/3.0/4.2/5.0					
OSD language		English/Simplified Chinese/Traditional Chinese (TW)/Traditional Chinese (HK)/Arabic/French/Portuguese/Russian/Thai/Vietnamese/Indonesia/Malay					
Power requirement		AC 110 – 240 V, 50/60 Hz					
Power consumption (W) (Standby) (W)		235 (0.5)	65FL: 222 (0.5) 65FK: 207 (0.5)	55FL: 176 (0.5) 55FK: 148 (0.5)	50FL: 144 (0.6) 50FK: 122 (0.6)	118 (0.6)	
	Dimensions						
	without stand	W x H x D (mm)	1678 × 975 × 74	1462 × 854 × 76	1232 × 722 × 80	1118 × 655 × 80	948 × 544 × 80
	with stand	W x H x D (mm)	1678 × 1056 × 403	1462 × 920 × 289	1232 × 785 × 273	1118 × 720 × 273	948 × 607 × 273
Weight without stand (kg) (with stand) (kg)		27.5 (28.5)	22.0 (23.0)	13.0 (13.5)	11.0 (11.5)	7.9 (8.3)	
Operating temperature		0°C to +40°C					

- As a part of policy of continuous improvement, SHARP reserves the right to make design and specification changes for product improvement without prior notice. The performance specification figures indicated are nominal values of production units. There may be some deviations from these values in individual units.
- Specification may differ depending on the selected country.

CAUTION

- Installing the Liquid Crystal Television requires special skill that should only be performed by qualified service personnel. Customers should not attempt to do the work themselves. SHARP bears no responsibility for improper mounting or mounting that results in accident or injury.
- Carefully read the instructions that come with the bracket before beginning work.
- Do not install / mount the TV with tilting condition.

Appendix

Trademarks

Google TV is the name of this device's software experience and a trademark of Google LLC. Google, YouTube, Google Photos, Chromecast built-in and other marks are trademarks of Google LLC.

Google Assistant is not available in certain languages and countries. Availability of services varies by country and language.

Dolby, Dolby Audio, Dolby Atmos, Dolby Vision, Dolby Vision IQ and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 1992–2022 Dolby Laboratories. All rights reserved.

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

The Wi-Fi CERTIFIED™ Logo is a certification mark of Wi-Fi Alliance®.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by SHARP Corporation is under license. Other trademarks and trade names are those of their respective owners.

Covered by one or more claims of the HEVC patents listed at patentlist.accessadvance.com.

ANY USE OF THIS PRODUCT IN ANY MANNER OTHER THAN PERSONAL USE THAT COMPLIES WITH THE MPEG-2 STANDARD FOR ENCODING VIDEO INFORMATION FOR PACKAGED MEDIA IS EXPRESSLY PROHIBITED WITHOUT A LICENSE UNDER APPLICABLE PATENTS IN THE MPEG-2 PATENT PORTFOLIO, WHICH LICENSE IS AVAILABLE FROM MPEG LA, LLC, 6312 S. Fiddlers Green Circle, Suite 400 E, Greenwood Village, Colorado 80111 U.S.A.

THIS PRODUCT IS LICENSED UNDER THE VC-1 PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE VC-1 STANDARD ("VC-1 VIDEO") AND/OR (ii) DECODE VC-1 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE VC-1 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE [HTTP://WWW.MPEGLA.COM](http://WWW.MPEGLA.COM)

THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL USE OF A CONSUMER OR OTHER USES IN WHICH IT DOES NOT RECEIVE REMUNERATION TO (i) ENCODE VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR (ii) DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE [HTTP://WWW.MPEGLA.COM](http://WWW.MPEGLA.COM)

THIS PRODUCT IS LICENSED UNDER THE MPEG-4 VISUAL PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NON-COMMERCIAL USE OF A CONSUMER FOR (i) ENCODING VIDEO IN COMPLIANCE WITH THE MPEG-4 VISUAL STANDARD ("MPEG-4 VIDEO") AND/OR (ii) DECODING MPEG-4 VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NON-COMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED BY MPEG LA TO PROVIDE MPEG-4 VIDEO. NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION INCLUDING THAT RELATING TO PROMOTIONAL, INTERNAL AND COMMERCIAL USES AND LICENSING MAY BE OBTAINED FROM MPEG LA, L.L.C. SEE [HTTP://WWW.MPEGLA.COM](http://WWW.MPEGLA.COM)


Appendix

EN	<p>Symbols placed on equipment</p>  <ul style="list-style-type: none"> This mark indicates the product operates on AC Voltage.  <ul style="list-style-type: none"> This mark indicates a class II or double insulated electrical appliance wherein the product does not require a safety connection to electrical earth (ground).
CS	<p>设备上的符号</p>  <ul style="list-style-type: none"> 此标记表示产品在交流电压下工作。  <ul style="list-style-type: none"> 此标记表示 II 类或双重绝缘电器，因此产品不需要与电气接地（接地）进行安全连接。
FR	<p>Symboles placés sur l'équipement</p>  <ul style="list-style-type: none"> Ce symbole indique que le produit fonctionne sous tension alternative.  <ul style="list-style-type: none"> Cette marque indique un appareil électrique de classe II ou à double isolation, ce qui implique que le produit n'a pas besoin d'une connexion de sécurité à la mise à la terre électrique.
PT	<p>Simbolos existentes no equipamento</p>  <ul style="list-style-type: none"> Esta marca indica que o produto funciona com tensão CA.  <ul style="list-style-type: none"> Esta marca indica que se trata de um equipamento elétrico classe II ou duplamente isolado e, como tal, o produto não requer uma ligação elétrica de segurança com ligação à terra (massa).
ID	<p>Simbol yang ditempatkan pada peralatan</p>  <ul style="list-style-type: none"> Tanda ini mengindikasikan bahwa produk beroperasi pada Tegangan AC.  <ul style="list-style-type: none"> Tanda ini mengindikasikan bahwa alat listrik terisolasi kelas II atau ganda, di mana produk tersebut tidak memerlukan koneksi pengardean (pembumi).
AR	<p>الرموز الموضحة على الجهاز</p>  <ul style="list-style-type: none"> تشير هذه العلامة إلى أن المنتج يعمل على جهد فولطية التيار المتردد.  <ul style="list-style-type: none"> تشير هذه العلامة إلى جهاز كهربائي من الفئة II أو جهاز كهربائي مزدوج العزل حيث لا يتطلب المنتج أي وصلة أمان بسلك كهربائي أرضي (مؤرض).

Appendix

EN	<p>Clearing the password</p> <p>If you forget the password, clear the password using the following procedure.</p> <ol style="list-style-type: none"> From the Dashboard screen, select "Settings" > "System" > "About" > "Reset" > "Factory reset", and then press ENTER/OK. When you perform a reset, the TV will be returned to the factory preset values, and you need to set the password again. <p>NOTE</p> <ul style="list-style-type: none"> As a precautionary measure, make a note of your password, and keep it in a safe place.
CS	<p>清除密码</p> <p>若您忘记密码，请按照以下程序清除密码。</p> <ol style="list-style-type: none"> 从信息中心屏幕中，选择“设置”>“系统”>“关于”>“重置”>“恢复出厂设置”，然后按下 ENTER/OK。 一旦选择重置，电视将恢复到出厂设置，您需要再次设置密码。 <p>注</p> <ul style="list-style-type: none"> 为防万一，请记下您的密码，并妥善保管。
FR	<p>Effacement du mot de passe</p> <p>Si vous oubliez le mot de passe, effacez le mot de passe à l'aide de la procédure suivante.</p> <ol style="list-style-type: none"> A partir de l'écran Tableau de bord, sélectionnez « Paramètres » > « Système » > « À propos » > « Réinitialiser » > « Rétablir la config. d'usine », et appuyez ensuite sur ENTER/OK. Lorsque vous effectuez une réinitialisation, le téléviseur revient aux valeurs pré-réglées en usine et vous devez redéfinir le mot de passe. <p>REMARQUE</p> <ul style="list-style-type: none"> Par mesure de précaution, prenez soin de noter votre mot de passe et conservez-le dans un endroit sûr.
PT	<p>Apagar a senha</p> <p>Se se esquecer da senha, apague-a através do seguinte procedimento.</p> <ol style="list-style-type: none"> No ecrã Painel, seleccione "Configurações" > "Sistema" > "Sobre" > "Reiniciar" > "Redefinir para a configuração original", e depois prima ENTER/OK. Ao fazer reset, a volta a ter os valores de fábrica predefinidos e, como tal, vai necessitar de definir novamente a palavra passe. <p>NOTA</p> <ul style="list-style-type: none"> Como medida de precaução, tome nota da sua palavra passe e guarde-a num local seguro.
ID	<p>Membersihkan kata sandi</p> <p>Jika Anda lupa kata sandi, hapus kata sandi menggunakan prosedur berikut.</p> <ol style="list-style-type: none"> Dari layar Dasbor, pilih "Setelan" > "Sistem" > "Tentang" > "Reset" > "Reset ke setelan pabrik", lalu tekan ENTER/OK. Ketika Anda melakukan reset, TV akan dikembalikan ke pengaturan standar pabrik, dan Anda harus mengeset kata sandi kembali. <p>CATATAN</p> <ul style="list-style-type: none"> Sebagai langkah pencegahan, buat catatan untuk kata sandi Anda, dan simpan itu di tempat yang aman.
AR	<p>مسح كلمة السر</p> <p>إذا نسيت كلمة المرور، فامسح كلمة المرور باستخدام الإجراء التالي.</p> <ol style="list-style-type: none"> من الشاشة لوحة البيانات، حدد "الإعدادات" > "النظام" > "لمحة" > "إعادة الضبط" > "إعادة الضبط على الإعدادات الأصلية". ثم اضغط على زر الإدخال ENTER/OK. عندما تجري إعادة ضبط، سيعود التلفاز إلى قيم المصنع مسبقاً. وستحتاج لضبط كلمة المرور مجدداً. <p>ملاحظة</p> <ul style="list-style-type: none"> وكتدابير احترازي، دون ملاحظة عن كلمة المرور، واحتفظ بها في مكان آمن.

 Dimensional Drawing

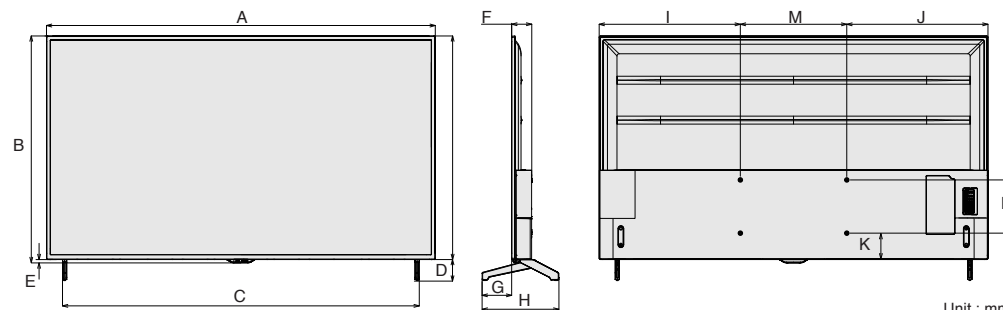

Unit : mm

Model name	A	B	C	D	E	F	G	H	I	J	K	VESA	
												L x M	Type & Depth
4T-C75FK1X	1678	975	1636	95	14	74	188	403	539	539	75	300 x 600	M8 x 32
4T-C65FL1X	1462	854	1341	79	13	76	111	289	531	531	100	200 x 400	M6 x 15
4T-C65FK1X	1462	854	1341	79	13	76	111	289	531	531	100	200 x 400	M6 x 15
4T-C55FL1X	1232	722	1043	78	5	80	108	273	466	466	144	200 x 300	M6 x 30
4T-C55FK1X	1232	722	1043	78	5	80	108	273	466	466	144	200 x 300	M6 x 30
4T-C50FL1X	1118	655	928	80	15	80	108	273	409	409	122	200 x 300	M4 x 12
4T-C50FK1X	1118	655	928	80	15	80	108	273	409	409	122	200 x 300	M4 x 12
4T-C42FK1X	948	544	761	78	15	80	112	273	399	399	177	150 x 150	M4 x 12

EN	<p>Postal Code (Indonesia only)</p> <p>Press "TOOLS (TOOLS)".</p> <p>Select "TV options" > "Advanced Options" > "Postal Code".</p> <p>This function enable you to select your local postal code.</p> <p>NOTE • "Postal Code" will be appear only when region "Indonesia" is selected.</p>	PT	<p>Código postal (apenas Indonésio)</p> <p>Prima "TOOLS (TOOLS)".</p> <p>Selecione "Opções da TV" > "Opções avançadas" > "Código postal".</p> <p>Esta função permite-lhe seleccionar o seu código postal local.</p> <p>NOTA • O "Código postal" aparecerão apenas quando for selecionado o região "Indonésia".</p>
CS	<p>邮政编码 (仅限印尼)</p> <p>按下 "TOOLS (TOOLS)".</p> <p>选择"电视选项">"高级选项">"邮政编码"。</p> <p>此功能可以选择当地邮政编码。</p> <p>注 • "邮政编码" 仅在选择区域为"印度尼西亚"时出现。</p>	ID	<p>Kode Pos (Indonesia saja)</p> <p>Tekan "TOOLS (TOOLS)".</p> <p>Pilih "Ops TV" > "Ops Lanjutan" > "Kode Pos".</p> <p>Fungsi ini memungkinkan Anda memilih kode pos lokal.</p> <p>CATATAN • "Kode pos" hanya akan ditampilkan bila wilayah "Indonesia" dipilih.</p>
FR	<p>Code postal (Indonésien uniquement)</p> <p>Appuyez sur "TOOLS (TOOLS)".</p> <p>Sélectionnez "Options TV" > "Options avancées" > "Code postal".</p> <p>Cette fonction vous permet de sélectionner votre code postal local.</p> <p>REMARQUE • "Code postal" apparaîtront uniquement lorsque le région "Indonésie" est sélectionné.</p>	AR	<p>الرمز البريدي (الإندونيسيا فقط)</p> <p>اضغط على "TOOLS (TOOLS)".</p> <p>حدد "خيارات التلفزيون" > "الخيارات المتقدمة" > "الرمز البريدي".</p> <p>تمكنك هذه الوظيفة من تحديد الرمز البريدي المحلي الخاص بك.</p> <p>ملاحظة • ستظهر "الرمز البريدي" عند اختيار المنطقة "إندونيسيا" فقط.</p>

SHARP

SHARP CORPORATION

Printed in Malaysia
 马来西亚印刷
 Imprimé en Malaisie
 Impresso na Malásia
 Dicitak di Malaysia
 صنع في ماليزيا